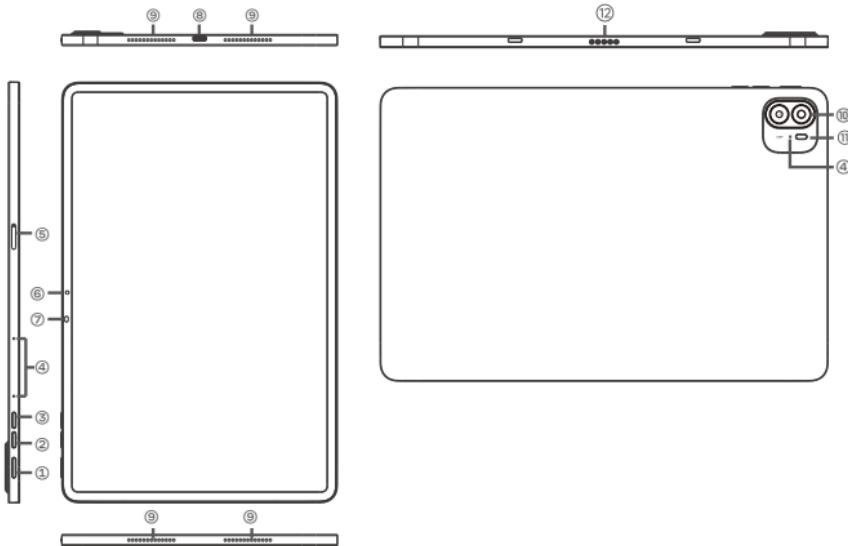


BRAVE

GET STARTED

Read this guide carefully before using your device.

Images and illustrations in this guide are for your reference. Actual product may vary.

OVERVIEW

01. Power

02. Volume+

03. Volume-

04. Mic

05. MicroSD

06. Front Camera

07. Light sensor

08. Type-C Port

09. Speaker


10. Rear Camera

11. Flashlight

12. Pogo pin connector

INSTALL MICRO SD CARDS

Turn off your device before inserting or removing the card.

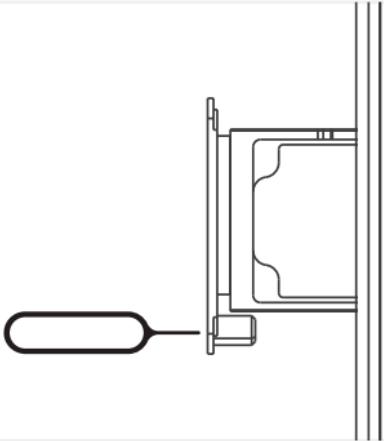**CHARGE YOUR DEVICE**

In some countries or regions, this package may not include a charger to help reduce environmental impact. You can power the device using most USB power adapters along with a USB Type-C cable. For the best charging experience, use a USB Power Delivery (PD) charger that provides at least 33 W of power. Make sure to use a charger that meets local safety standards for mobile devices. Chargers that comply with international standards such as EN/IEC/UL 62368-1 are recommended. Using chargers that don't meet safety standards could cause damage or injury.

HELP AND SUPPORT

To get more information and download the User guide, go to <https://brave.tech/support>

SECURITY INFORMATION

Before using and operating the equipment, to ensure optimal performance of the equipment and to avoid hazardous or illegal situations, please review and follow all safety information.

CHARGING CAPABILITIES AND THE COMPATIBLE CHARGING OF DEVICES OF THIS PRODUCT.

To achieve the maximum supported charging speed, we recommend using the 33W Brave Charger, which is fully compatible with the device's USB Power Delivery (USB-PD) standard..